
06 Add the next panels

1. Repeat steps 04 and 05 for each panel, working from one end of the run.
2. On a shared post, butt the panel edges together on the center of the post. Each panel uses its own half of the post.
3. Keep every top edge flush with the posts so the run reads as one clean line.

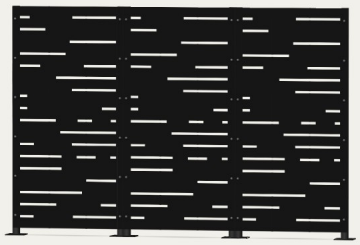

FINAL CHECK

All posts plumb and tight · every screw in place · top edges flush and level · no gaps at the joints.

CARE

No rust · no fading. Rinse with water and mild soap; avoid abrasive cleaners.


NEED HELP?

(956) 312-3454
(956) 525-9666
latticesmart.us

ALUMINUM COMPOSITE PANEL

Decorative Panel

36" × 70" panel · 72" posts

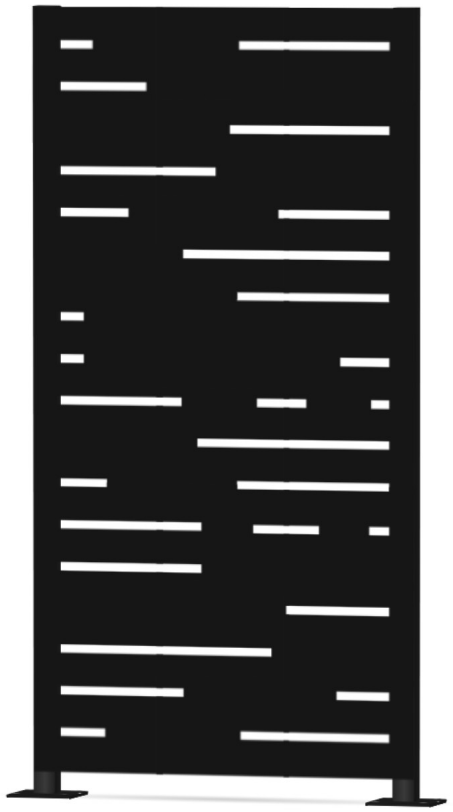

What's included



- **A** Decorative panel, 36" × 70" — 1 pc
- **B** LatticeSmart steel post, 2" × 72" (sold separately)
- **C** Base plate with 4 holes — part of each post
- **D** Black self-drilling screws (drill-point tip) — 12 pcs
- **E** Concrete anchors 3/8" × 3" — 4 per post (included)


TOOLS YOU'LL NEED

Tape measure · marker or pencil · string line or chalk line · drill / driver · 3/8" masonry drill bit · 24" level · 2" spacer blocks · safety glasses

04 Place the panel

1. Set two 2" spacer blocks on the ground in front of the posts.
2. Rest the panel (A) on the blocks, pressed flat against the front faces of the posts.
3. Check the top edge is flush with the tops of the posts and the side edges line up: flush with the outside face of an end post, or on the center of a shared post.


05 Screw into the steel post

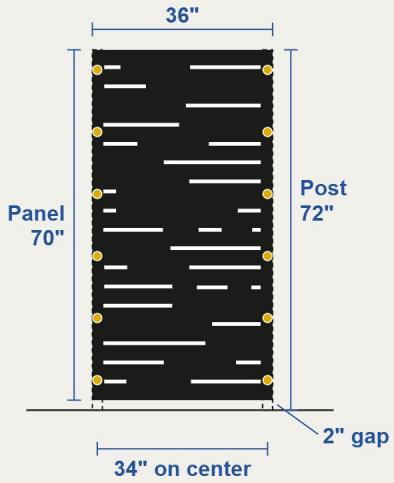

Single panel shown

1. Use 6 screws (D) per side, in a straight vertical line over the post.
2. End post: 1" in from the panel edge (post center). Shared post: ½" in.
3. Drive the top screw on each side first, then the bottom, then the 4 in between, evenly spaced.
4. Drill-point tip: no pre-drilling needed. Snug — don't overtighten. Remove the spacer blocks.

03 Set the remaining posts

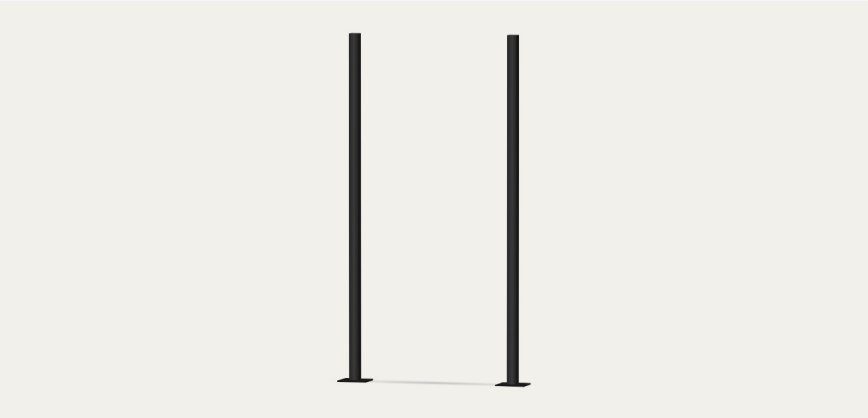

1. Repeat step 02 for the next post, on its center mark.
2. Keep the front face of every post just touching the string line, so all panels sit in one straight plane.
3. Measure between posts at the bottom and at the top: both distances must match. If not, the post is leaning — adjust before tightening.
4. Lay a straight board across the tops of two posts with the level on it. Bubble centered = tops are even, so the panel will sit flush.
5. Tighten all anchors and check plumb once more on every post.

TIP Set all posts before hanging any panel. A row of aligned posts makes every panel go on easily.


Plan your layout

Each panel is 36" wide. Panels in a row share their middle posts, so a run always needs one more post than panels.

PANELS	LENGTH	POSTS	ANCHORS
1	3 ft	2	8
2	6 ft	3	12
3	9 ft	4	16
4	12 ft	5	20

SOIL OR UNEVEN GROUND?


Concrete slab: use the included anchors (step 02). On soil or irregular terrain, use one **2 ft In-Ground Extension** per post (sold separately) instead.

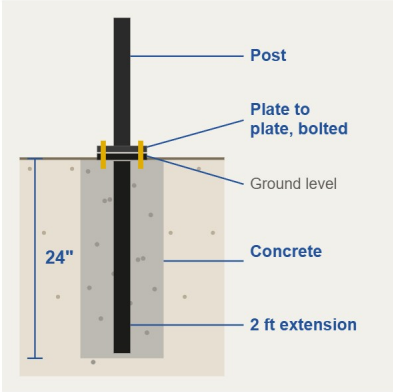

1. Mark the post centers (step 01). Dig a hole 24" deep at each mark.
2. Set the extension in the hole, plate up and level, at ground level. Use a level string so every plate sits at the same height.
3. Fill the hole with concrete. Let it cure as the bag directs.
4. Set the post plate on the extension plate, line up the 4 holes and bolt them together, plate to plate. Check plumb, then go on to step 03.

01 Measure and mark

1. Stretch a string line (or snap a chalk line) where the front of the posts will be. This keeps the whole run straight.
2. Mark the start of the run on the line. Then mark every 36" — each mark is a panel joint, and the last one is the end.
3. Mark the post centers: **end posts** 1" inside the start and end marks (posts are 2" wide); **shared posts** right on each joint mark.
4. Single panel? Its two posts are 34" center to center — 36" outside to outside.

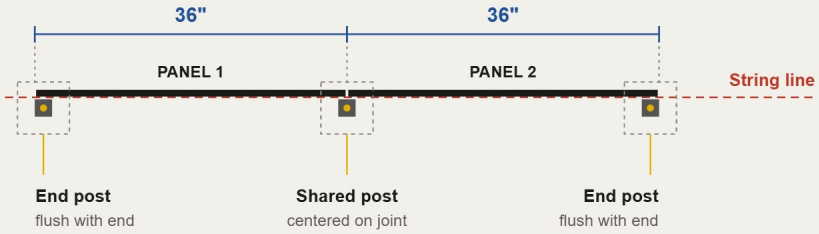


Top view · two panels

BEFORE YOU START Measure twice · check for pipes or wires before drilling or digging · wear safety glasses · read all steps once.

02 Anchor the first post



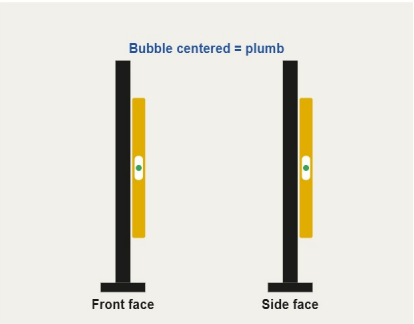

1. Stand the post (B) on its center mark with its front face just touching the string line.
2. Trace the 4 holes of the base plate (C) on the concrete. Move the post aside.
3. Drill the 4 holes with a 3/8" masonry bit, at least 3" deep. Blow out the dust.
4. Set the post back, insert the four 3/8" × 3" anchors (E) and snug them.
5. Hold the level on the front face, then on a side face. With the bubble centered on both, tighten the anchors fully.